

REY001A

Rear suspension package Ensemble pour suspension arrière Ensemble para suspensión de trasero

INSTALLATION INSTRUCTIONS

- a) Steps (1) and (2) for Leaf Spring suspension only
1) Measure length of rear axle pad and add 1" to this measurement. Mark bottom plate #5 with this measurement making sure it is centered on to plate. Use this measurement to weld legs (#6) to plate as shown in Diagram A.
2) Place bottom plate over U-bolts and weld legs to axle pad after Timbren assembly is in proper position. (see Diagram A)
- b) With vehicle unloaded, measure 6-3/4" from top of U-bolt pad (or Timbren bottom plate) to bottom of Timbren frame bracket (see Diagrams B & C)
- c) Drill holes for Timbren bracket providing for at least four 1/2" Gr.8 bolts through the bracket & frame.
- NOTES:**
When positioning frame bracket make sure that the Aeon spring will rest over the center of axle pad or rest on top of the bottom support with spigots fitting into holes on the underside of the Aeon spring.
- d) Assemble Aeon rubber spring and Timbren frame bracket.
- e) Mount Timbren assembly to truck frame.

SAFETY CAUTIONS

Ensure sufficient clearance between frame bracket & tire.
Always refer to and follow the vehicle manufacturer's guidelines when welding or drilling during installation of this kit.

Do not exceed vehicle manufacturer's recommended axle weight rating. Check for AEON[®] interference with vehicle components - Under load AEON[®] will "expand" in diameter.

INSTRUCTIONS DE MONTAGE

- a) Étapes 1) et 2) pour la suspension à ressort à lames seulement
1) Mesurer la longueur du coussin de l'essieu arrière et ajouter un pouce à cette mesure. Faire une marque sur la plaque inférieure no.5 de la longueur de la mesure susmentionnée en s'assurant qu'elle est au centre de la plaque. Utiliser cette mesure pour souder les pattes (no.6) sur la plaque tel qu'indiqué dans le schéma A.
2) Placer la plaque inférieure sur le boulon en U et souder les béquilles au coussin de l'essieu dès que l'assemblage Timbren est dans la bonne position (voir le schéma A).
- b) Calculer 6-3/4 po entre la partie supérieure du coussin du boulon en U (ou la partie inférieure de la plaque Timbren) et la partie inférieure du support du cadre Timbren pour les véhicules à vide (voir les schémas B et C).
- c) Percer des trous pour le support Timbren pouvant recevoir au moins quatre boulons de 1/2 po Gr.8 à travers le support et le cadre.
- REMARQUES:**
S'assurer, au moment de placer le support du cadre, que le ressort Aeon demeurera au centre du coussin de l'essieu ou qu'il demeurera sur le dessus du support inférieur avec les queues de fixation insérées dans les trous sous le ressort Aeon.
- d) Assembler le ressort en caoutchouc Aeon et le support du cadre Timbren.
- e) Monter l'assemblage Timbren au cadre du camion.

MESURES DE SÉCURITÉ

Assurer un dégagement suffisant entre le support du cadre et les pneus.
Se référer aux directives du fabricant et les suivre en tout temps lors du soudage ou du perçage en ce qui concerne l'installation du présent ensemble.

Ne pas dépasser le poids nominal sur l'essieu recommandé par le fabricant du véhicule. Vérifier que le ressort AEON[®] n'a pas d'incidence sur d'autres pièces du véhicule - Le ressort AEON[®] augmentera son diamètre avec la charge.

INSTRUCCIONES DE INSTALACIÓN

- a) Pasos (1) y (2) para suspensión de resorte de ballesta únicamente
1) Mida la longitud del cojín amortiguador del eje trasero y agregue 1" a esta medida. Marque la placa inferior #5 con esta medida asegurándose de que esté centrada en la placa. Utilice esta medida para soldar los catetos (#6) a la placa como se muestra 2) Coloque la placa inferior sobre los pernos "U" y suelde los catetos al cojín amortiguador del eje después de que la unidad Timbren esté colocada en la posición correcta. (vea Diagrama A)
- b) Con el vehículo descargado, mida 6-3/4" desde la parte superior del cojín amortiguador del perno "U" (o la placa inferior Timbren) hasta la parte inferior de la abrazadera del chasis Timbren (vea Diagramas B y C)
- c) Perfore los orificios para la abrazadera Timbren previendo al menos para cuatro pernos de 1/2" Gr.8 a través de la abrazadera y el chasis.
- NOTAS:**
Al colocar en posición la abrazadera del chasis asegúrese de que el resorte Aeon descansa sobre el soporte inferior con las espigas encajadas en los orificios en la parte inferior del resorte Aeon.
- d) Ensamble el resorte de caucho Aeon y la abrazadera del chasis Timbren.
- e) Monte la unidad Timbren al chasis del camión.





PRECAUCIONES DE SEGURIDAD

Deje suficiente espacio libre entre la abrazadera del chasis y la llanta.
Siempre consulte y siga las instrucciones del fabricante del vehículo al soldar o perforar durante la instalación de este kit.

No exceda la carga nominal en el eje recomendada por el fabricante del vehículo. Compruebe que no haya interferencia entre el resorte AEON[®] y los otros componentes del vehículo. Bajo carga, el resorte AEON[®] se amplía en diámetro.

Ref. = Reference = No. de référence = Núm. de referencia
Part = Part #. = No. de pièce = Núm. de pieza
Qty. = Quantity = Quantité = Cantidad

Ref	Part	Qty
1	K51282-003	2
2	F31005-150	4
3	A00260-65D60	2
4	F11106-150	4
5	K11004-003	2
6	K11005-003	4

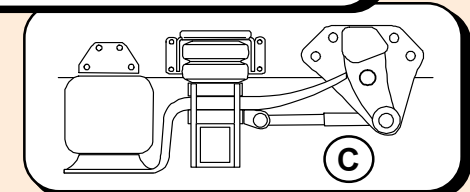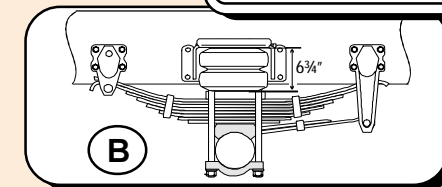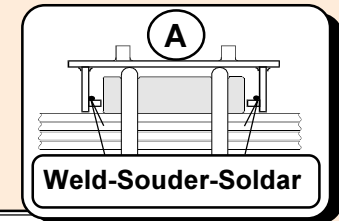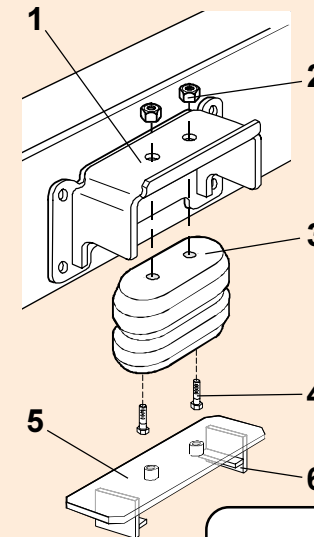

REY001A





Ride Quality Control

TIMBREN SES

Suspension Enhancement Systems


Clearance Instructions

Typical Light Duty & Medium Duty Installation

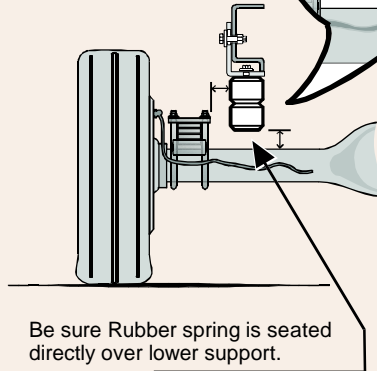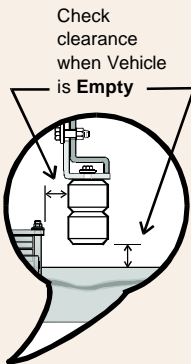

Be sure Rubber spring is seated directly over lower support.

Typical Heavy Duty Installation

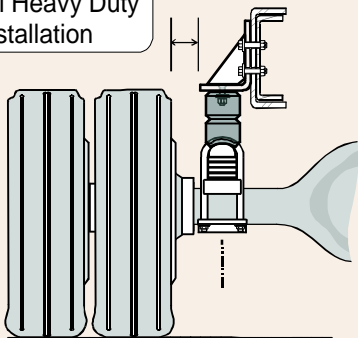

For Light Duty Pickups & Vans

Rear SES kits should have approximately 1" gap between rubber spring and axle for 1/2 and 3/4 tons, and for one ton the gap should be about 1/2" when the vehicle is completely unloaded. A cap or fifth wheel plate will reduce or eliminate this gap.

Front SES kits are usually in contact with the front suspension at all times.

For Medium Duty & Heavy Duty Trucks, Trailers, Motor Homes, and more

Medium & Heavy Duty vehicles often have pre-load as outlined in the instruction sheet. (For specific Medium Duty applications with a constant load on the suspension like Rvs, Utility Vans or Cube Vans, the Timbren SES kits are pre-loaded.)

Check clearances when vehicle is empty...

Consider Your Needs..!

Knowing the use of the vehicle will help you to select the right SES kit. For example a one ton truck can be configured as a pick-up, service vehicle or tow truck. Standard capacity or severe service applications are available for many applications.

Knowing that the suspension has been modified or is old and sagging should indicate the need to adjust the ride height to obtain the correct clearance.

This can be done by altering the SES kit (changing rubber spring or bracket) or re-arching the leaf springs to renew the optimum OEM ride height.

Limited Lifetime Warranty

TIMBREN SES kits are warranted against defects in material and workmanship, under normal use and service, for the life of the vehicle on which the kit was originally installed. The warranty is not transferable and proof of purchase is required. The warranty is limited to the replacement of the failed part. TIMBREN will not be responsible for any labour or freight charges involved in the replacement of any product. TIMBREN shall be entitled to make its own inspection to determine the validity of the warranty claim. TIMBREN shall not be liable nor warrant the product in the event of alteration, misuse, overload, negligence or damage caused by others.

If ride is unsatisfactory in any way, please call:

TIMBREN INDUSTRIES INC.

1-800-263-3113

www.timbren.com
email: sales@timbren.com